

ADMINISTRATOR ENROLMENT

Left button 3 s

Blue LED is flashing fast.

CHOOSE THE RELAY:
Relay 1: left button 2 s
Relay 2: right button 2 s
Relay 1+2: L+R button 2 s

Green LED + buzz 1 s

Blue LED is flashing.

Administrator finger 3 x

Green LED + buzz 1 s
Finger is stored.

Repeat the procedure 3 times!!!
It is recommended to update the administrators and users list.

USER FINGER ENROLLMENT

Left button 3 s

Blue LED is flashing.

Administrator finger 1 x

Blue LED is flashing fast.

CHOOSE THE RELAY:
Relay 1: left button 2 s
Relay 2: right button 2 s
Relay 1+2: L+R button 2 s

Green LED + buzz 1 s

Blue + green LED are flashing alternately.

User finger 3 x

Green LED + buzz 1 s
Finger is stored.

It is recommended to update the administrators and users list.

DELETING A USER FINGER

CHECK THE LIST

Right button 5 s

Blue LED is flashing.

Administrator finger 1 x

Green LED + buzz 1 s

Green + red LED are flashing alternately.

User finger 1 x
(deleting selection)

Green + red LED + buzz 3 x 1 s
User finger was deleted.

Only one user fingerprint can be deleted at the time. If a user has more than one finger enrolled, each finger must be deleted separately. Check the administrators and users list.

DELETE ALL

Both buttons 10 s

Blue + red LED are flashing alternately.

Administrator finger 1 x

Green LED + buzz 1 s

Blue + red LED are flashing alternately.

Administrator finger 1 x

Blue + red LED + buzz 5 x 1 s
Fingerprint database was deleted.

All fingerprints were deleted, including the administrators. It is recommended to immediately enrol 3 new administrators.

POWER MODE SELECTION

Left button 20 s

Hold the button until green LED starts flashing.

Constant power mode:
right button 2 s

Green LED + buzz 1 x 1 s
Constant power on.

Power save mode:
both buttons 2 s

Green LED + buzz 3 x 1 s
Power saving on.